# CMVTC Mobile DVR USER GUIDE



# Mobile DVR (Digital Video Recorder)

## 8 Channels HDD MOBILE HD DVR -1080P / 720P / 960H



Please Note: Due to our constant efforts of product improvement, we reserve the sole right to change product specifications, functions, operations and perform other modifications at our sole discretion without notification to our clients. We advise our clients to monitor our web site for notifications and implementing changes as made necessary regarding the above.

We also encourage constructive User feedback regarding errors, omissions and especially, useful feature and accessory upgrades as well as innovative User implementation of our products to creatively solve problems.

## **USING THE USER INTERFACE (UI)**


The MOBILE HD DVR User Interface is designed to be clear, concise, consistent and easy to use for system setup, use and change. All selections and data entries are thru the use of the IR Remote Control (IRC) and the Virtual Keyboard. Read the dedicated pages regarding their use and the operational cues within the Screen Features.

## **User Index**

USING THE USER INTERFACE (UI)
IR REMOTE CONTROL (IRC) FUNCTION KEYS
IR REMOTE CONTROL USE FOR DATA ENTRY (IRC) 5 -
TYPICAL UI PAGE LAYOUT 6 -
MENU SCREEN LAYOUT 7 -
DATA SCREEN LAYOUT 8 -
DATA ENTRY AND REPORT FIELDS9 -
VIDEO SCREEN LAYOUT 10 -
DEVICE START-UP 11 -
1.0 INITIAL LOGIN 12 -
1.1 SETUP MENU 13 -
1.1.1.1 DATE AND TIME 14 -
1.1.2.1 VEHICLE SETUP 15 -
1.1.3.1 USER SETUP 16 -
1.1.3.1.1 ADD USER 17 -
1.1.3.1.2 MODIFY USER 18 -
1.1.3.1.3 DELETE USER 19 -
1.1.4.1NETWORK SETUP (3G/4G/WIFI Option Required) 20 -
1.1.5.1 DISPLAY SETUP (PG 1 OF 2)
1.1.5.2 DISPLAY SETUP (PG 2 OF 2)
1.1.6.1 CODE OSD 22 -
1.2.1 CHANNELMODE 23 -
1.3.1.1 RECORD SETUP 25 -
1.3.2.1 MAIN CODE 26 -
1.3.3.1 SUB – STREAM SETUP 27 -
1.3.4.1 RECORDING SCHEDULE - 28 -
1.3.5.1 MIRROR SETUP 29 -
1.3.6.1 SD CARD RECORDING SETUP 30 -
1.3.7.1 IP CAMERA SETUP31 -

1.3.7.1.1 ADD IP CAMERA	32 -
1.3.7.1.2 MODIFY IP CAMERA	33 -
1.3.7.1.3 DELETE IP CAMERA	34 -
1.4.1.1 SENSOR SETUP	35 -
1.4.2.1 SPEED SETUP	- 36 -
1.4.3.1 G SENSOR SETUP	37 -
1.4.4.1 TEMPERATURE SETTINGS	38 -
1.4.5.1 ALARM OUT SETUP	39 -
1.4.6.1 MOTION DETECTION	40 -
1.4.6.1.1 MOTION DETECTION SETUP GRID	41 -
1.4.7.1 OTHER ALARMS	42 -
1.5.1.1 CONFIGURATION	43 -
1.5.2.1 FORMAT STORAGE MEDIA	44 -
1.5.3.1 SEARCH SYSTEM and ALARM LOGS	45 -
1.5.3.1.1 SEARCH LOG LIST	46 -
1.6.1.1 PTZCAMERA SETUP	47 -
1.6.2.1 WIRELESS SETUP	48 -
1.6.3.1WIFI SETUP (Optional module required)	49 -
1.6.4.1 FUEL SETUP	50 -
1.6.5.1 SERIAL DEVICE SETUP	51 -
1.7.1 SEARCH RECORDINGS	52 -
1.7.1.1 SEARCH PLAYBACK LIST	- 52 -
Search date for recorded files listed (No User entry)	- 53 -
Camera channel recorded from (No User entry)	- 53 -
Search Type producing listing: ALL, GENERAL or ALARM	- 53 -
Start time for the recording (No User entry)	- 53 -
End time for the recording (No User entry)	- 53 -
Video Resolution of the recording (No User entry)	- 53 -
Size of the recorded file (No User entry)	- 53 -
Select file and press to mark the file for viewing	- 53 -
1.7.1.1 VIEWING FILES	- 53 -
1.8.1 SYSTEM INFO, PG 1 OF 2	- 55 -
1.8.2 SYSTEM INFO, PG 2	- 56 -
USER NOTES AND FEEDBACK	- 56 -

## IR REMOTE CONTROL (IRC) FUNCTION KEYS

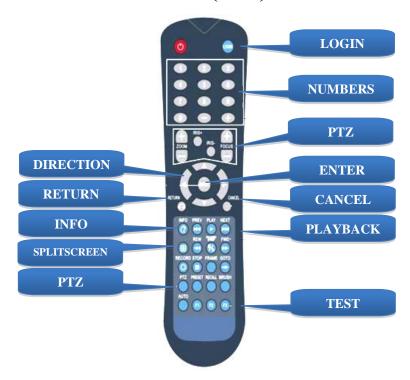

NOTE: Insert two new AAA alkaline batteries (User supplied) prior to the first use of the IRC. Function Key Color Code used in the User Guide:

**ENTRY** IRC (Above) function key: Black background with white lettering

MOBILE HD DVR Onscreen function key: Blue background with white lettering. A dark blue background appears it is selected by the IRC. Press **ENTER** to complete the function.

Operation and setup of the User Interface involve onscreen selection and key entry using the IRC:

**LOGIN** Press the **LOGIN** button to enter the 1.0 USER LOGIN Screen.

Press to display selected Info Screens overlaid on the Video

SPLITSCREEN Allows switching between four-screen and single screen views on the LCD

Monitor.Press Screen—Split key to display 5 screens.Press 1, 2, 3, 4 or 5 to display a full screen view of the desired camera view

NUMBERS Press number (0-9) to enter

CANCEL Press to delete last character entered

**RETURN** Press to Return to the previous screen

PAUSE/STEP
Press during the PlayBack mode to Pause and Single Step thru the Video. Press
Direction (arrow) keys to resume normal playback speed

Press during Play Back mode to start video playback after you have searched and selected the video file to review

Press successively to Fast Forward (2X,4X,8X,16X) the video during the Play Back mode

Press successively to Reverse (2X,4X,8X,16X) the video during Play Back mode

PTZ FUNCTION
Press to control various PTZ functions. Including Pan, Tilt, Zoom, Focus, Presets, etc. Note: PTZ Video Channel view must be selected prior to use

**KEYS** etc. Note: P1Z Video Channel view must be selected prior to use

F1, F2, F3 Used for special test functions

## IR REMOTE CONTROL USE FOR DATA ENTRY (IRC)



The IR Remote Control (IRC) is used in conjunction with the MOBILE HD DVR Virtual Keyboard to enter **alpha-numeric** data into the MOBILE HD DVR OS selection and data fields. The Virtual Keyboard will automatically appear as needed. Use the IRC Number Keys for Fields requiring numbers only.


Types of Data Fields used in the GUI:

(DATA FIELD)	The MOBILE HD DVR system will post the data. (No User entry)
USER ENTRY FIELD	The User will enter data using the IRC and/or the Virtual Keyboard will automatically be displayed when needed.
DROP DOWN MENU	The User will select one of the choices offered in the drop down Menu.

To enter/delete characters using the Virtual Keyboard and the IRC:

<b>Lower Case Letters and Numbers</b>	Move to the character and press <b>ENTER</b>
<b>Upper Case Letters</b>	Select son the Virtual Keyboard and press. ENTER Select the character and press ENTER
Switch Languages	Select <b>EN</b> on the Virtual Keyboard. Press <b>ENTER</b> to toggle the keyboard from English to Chinese and back
<b>Return to Previous Screen</b>	Press RETURN

## TYPICAL UI PAGE LAYOUT

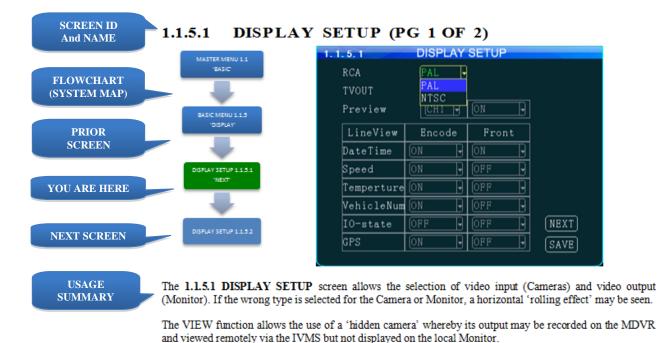

VIDEO IN TYPE Select one of two options to match the Camera Type connected to the MDVR: NTSC USA Video standard Europe, China, etc. VIDEO OUT TYPE Select one of two options to match the Monitor Type connected to the MDVR: ITEM NAME NTSC USA Video standard AND USAGE PAL Europe, China, etc. Allows use of camera without it being displayed in real time on the monitor. VIEW Select one of two options: ONThe camera view will be displayed OFFThe camera view will NOT be displayed VIEW CH Select the channel which will NOT be displayed on the local Monitor

ACTION BAR KEYS Action Bar Keys (Select, then press INTER):

NEXT To move to the 1.1.5.2 DISPLAY SETUP screen

SAVE To saveand activate the new settings

## MENU SCREEN LAYOUT



The 1.1 SETUP MENU screen shown above is an example of a typical UI Menu or sub Menu. The Menu acts as a general gateway to more specific Sub Menus and Data Screens for entering data and the settings of various MOBILE HD DVR functions, features and actions. In addition, if the User Guide isn't readily available, the User may simply move from icon to icon and read the Highlighted Icons Content list to search for access to a content specific screen.

Use the IR Remote Control (IRC) to move to and highlight the desired icon.

A content description of the highlighted Icon will appear near the bottom of the Menu screen listing the main topic screens associated with this Icon

There are three major sections:


TITLE BAR	The top blue bar consists of:	
	ID	Unique number to refer to a particular Screen/Menu for support purposes
	TITLE	Name of the screen for functional reference
ICON AREA	Each ICON relates to specific Sub Menus and Data Screens for entering data and the settings of various MOBILE HD DVR functions, features and actions	
HIGHLIGHTED ICON CONTENT	A list of the specific Sub Menus and Data Screens available through the highlighted Icon for entering data and the settings of various MOBILE HD DVR functions, features and actions	

Use the IRC Direction Keys to highlight the desired ICON, then:

Press to move to the associated Sub Menu or Data Screens

Press to return to previous screen

## **DATA SCREEN LAYOUT**

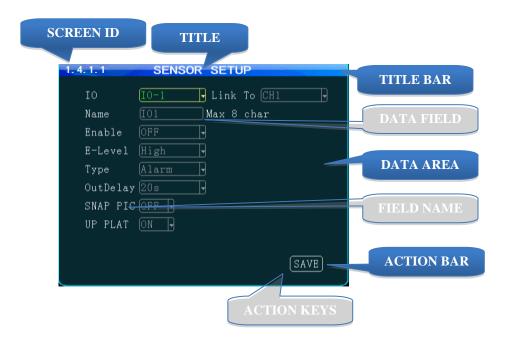


The Data Screen enables a User with appropriate authorization to view, setup and change the MOBILE HD DVRUI fields, features and functions.


There are three major sections:

TITLE BAR	The top blue bar consists of:	
	ID	Unique number to refer to a particular Screen/Menu for support purposes
	TITLE	Name of the screen for functional reference
DATA AREA	The data area consists of the fields necessary to setup MOBILE HD DVR options, features and functions, generate and report monitored activities, etc. For detailed definitions see the DATA AND ACTION FIELDS page in this User Guide	
ACTION BAR	The bottom has the Action Keys (SAVE) necessary to complete the data setup and entry functions associated with that screen. Select the desired key and press ENTERENTER	


## DATA ENTRY AND REPORT FIELDS

There are several different types of Data Fields used within the MOBILE HD DVR GUI:

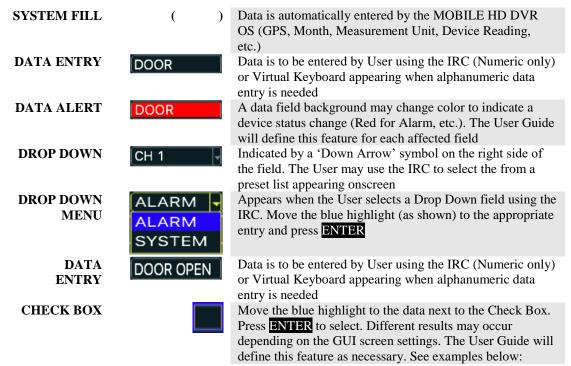

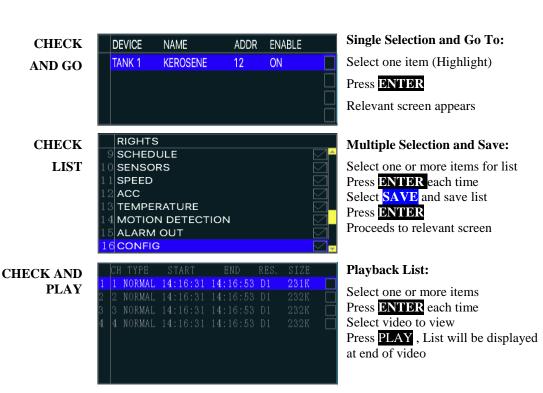

## **VIDEO SCREEN LAYOUT**

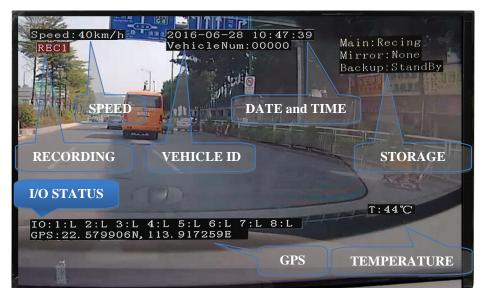

**Screen View with Data Overlay** 

Displays current or recorded camera view(s) and/or information (Previously set in the UI) overlaid on video, including System Messages, Alerts and Status. Requires a properly connected and setup Display Monitor (Optional)

View up to eight MOBILE HD DVR video screens are for real time or playback on a single channel A/V Monitor:



TWO VIEWS



THREE VIEWS



FOUR VIEWS



**EIGHT VIEWS** 

To Change Views:



Press to enter SPLIT SCREEN Mode

**1**, 2, 3,4or5

Press to display a full screen view of the desired camera view

## **DEVICE START-UP**

The following assumes the User has confirmed the MOBILE HD DVR is correctly installed according to the manufacturers installation instructions and is correctly configured for use:

Pre-check before Startup:

Connected to either the rear I/O Cable Monitor Connector or the A/V Jack on LCD MONITOR

the Front Panel

SECURITY PANEL Closed

Connected and MOBILE HD DVR STATUS PANEL PWR indicator (blue) **POWER SOURCE** 

is lit

Startup Sequence:

**CHECK POWER** The PWR indicator (blue) will be lit on the front Status Panel to show the

> MOBILE HD DVR is receiving power. If the Monitor is powered by the MOBILE HD DVR is may not display anything until the 0.0 LOADING

PAGE appears


Insert key into Security Lock located on the front panel **INSERT KEY** 

POWER ON Turn the key counterclockwise 90<sup>0</sup> from the UNLOCK position

Pre-Operation System Test. It is an automatic and required comprehensive P.O.S.T. test of the operational status during startup of the MOBILE HD DVR

requiring about 48 seconds to complete.

LOADING SCREEN The Loading Screen will be displayed during the P.O.S.T. If not, then check if Monitor is power On and the correct viewing channel set

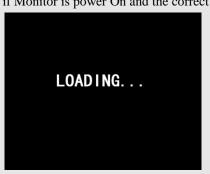

START UP VIEW

The Startup Screen will be displayed. The camera view(s) will be as set in the last setup of the MOBILE HD DVR



**CHECK STATUS** Use the IRC to verify the operational status of the MOBILE HD DVR:

Press to view 1.8.1 SYSTEM INFO PG 1 OF 2

**NEXT** Select, then:

**ENTIER** Press to view PG 2.

#### 1.0 INITIAL LOGIN





The 1.0USERLOGIN screen is used to provide secure access to the MOBILE HD DVR settings by requiring User Name and Password entry for access to the MOBILE HD DVR features, functions and settings.

For security purposes change original USER NAME and PASSWORD as soon as possible.

To Login:



**Note:** If the USER NAME and PASSWORD do not match, a warning prompt will appear in below the Password field to re-enter the correct data. If so, press **RETURN** to return to the LOGIN screen and enter the correct data.

Once the correct User Name and Password have been entered and accepted the 1.1 MASTER MENU will appear:




To setup the initial User Name and Password go to the 1.1.3.1 PASSWORD SETUP screen:



## 1.1 SETUP MENU




The **1.1SETUP MENU** allows access to eight sub menus allowing the User, depending on their System Access Credentials, to access, search, view and change features or functions:

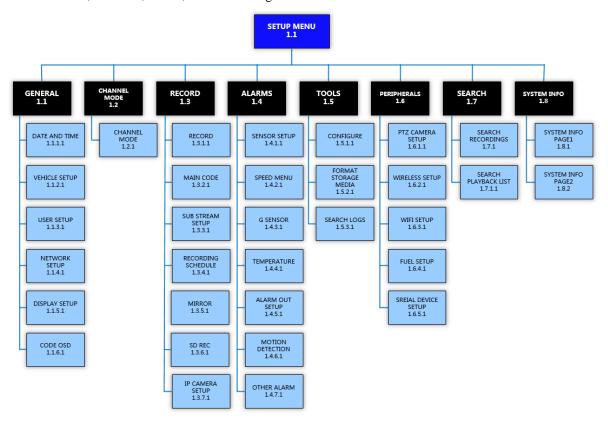

#### MASTER MENU FLOWCHART

## **1.1.1.1 DATE AND TIME**



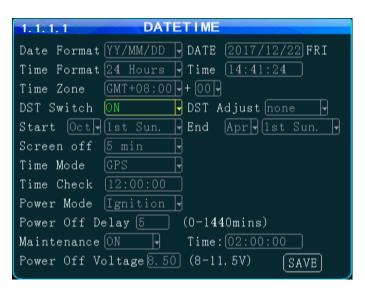

The **1.1.1.1 DATE and TIME** screen allows the User to select or enter data to set the System Time and other basic time related properties of the MOBILE HD DVR.

DATE	Enter the current date in the format requested	
TIME	Enter the correct local time in the format shown	
(DAY)	Auto filled by SYSTEM (No User entry)	
DATE FORMAT	Select to one of three possible date formats (Year-Month-Day, Day-Month-	
	Year, Month-Day-Year).	
TIME FORMAT	Select one of two Time Formats:	
	12 HOUR 0 to 12 hours	
	<b>24 HOUR</b> 0 to 2400 hours	
TIME ZONE	•	
PLUS	<b>y</b>	
TIME MODE	There are two methods of updating the System Time:	
	<b>MANUAL</b> The User will have to update the System Time.	
	GPS The GPS system will automatically update the System Time each	
	time it accesses the International GPS System.	
TIME CHECK	Enter time for the MOBILE HD DVR to use GPS to reset onboard time if	
	necessary	
MAINT	<u>.</u>	
	ON The selected functions are 'On'	
1.6 mm cm	OFF The selected functions are 'Off'	
	Enter the time the MOBILE HD DVR is to be turned 'Off', then 'On'	
DST	Daylight Savings Time. Select from two options:	
	<b>OFF</b> The default system setting. The User will have to manually change the	
	System Time to compensate for the DST time changes if applicable.	
	ON Enables the MOBILE HD DVR to automatically change the System Time	
	based on	
	Daylight Savings Time (DST)	
ADJ	Select the amount of time, if necessary, to be added to the GMT set time for local	
	accuracy	
START		
MONTH	·	
END	Select the Day DST is to end	
MONTH	Select the Month DST is to end	

## 1.1.2.1 VEHICLE SETUP





The **1.1.2.1VEHICLEINFO**screen is used to enter data and enable functions related to the company, vehicle, driver, mobile phone number and power related operation. The DEVICE NUMBER is the only field **required** to have data entered.

(DEVICE SERIAL ID)	Unique number assigned by factory. (No User entry)	
DEVICE NUMBER	Unique number (Up to 7digits) to display on Video Display, be recorded with the Video files and ID the Vehicle to IVMS	
DEPARTMENT	Enter company name (Up to 19 characters)	
DRIVER NAME	Drivers name or ID (Up to 19 characters)	
SIM NUMBER	Phone number for the MOBILE HD DVR contained SIM Card if installed	
MILE ACCRUAL	Select from two ODOMETER options:  ON Odometer will add (accrue) distance traveled based on GPS  OFF Function disabled	
ODOMETER(MILEAGE)	Enter starting mileage or kilometers if ACCRUAL function is 'ON'	
LICENSE PLATE (VEHICLE-NUM)	Enter License Plate characters (Up to 8 characters)	


Action Bar Keys (Select, then press **ENTER**):

CHANGE ODOMETER

To enter new distance related numbers into the ODOMETER field

SAVE
To save the new settings 1.1.2.1 VEHICLE INFO screen will remain showing

## **1.1.3.1 USER SETUP**

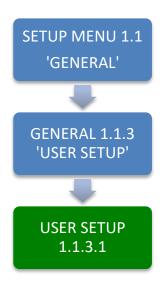



The **1.1.3.1 USER SETUP** screen allows setup of two levels of Password protected access to the MOBILE HD DVR UI. The ADMIN User account must have at least its Password changed first. Use the Action Bar keys to add, modify or delete User Accounts.

After the initial STSTEM (ADMIN) User Account has at least its Password changed and saved it will be necessary to login again using the new Password. WARNING: Store the ADMIN Password in a secure location. If it is lost or forgotten you will have to contact the manufacturer to regain access to the MOBILE HD DVR OS.

NOTE: For security purposes it is strongly recommended the Administrator setup and enable the Password function. The default Login: ADMIN Password: 888888

The MOBILE HD DVR Operating System is protected and accessed by two levels of password authority:

SYSTEM	Select from two options: Grants unlimited access and change privileges, including creating User Accounts, Passwords and restricted access Rights	
GENERAL	Provides Password, limited access and change Rights	
PASSWORD	Select from two options:  ON Password protection is enabled  OFF Password protection is off	
OP TIMEOUT	Select time period to elapse prior to automatically logging the User out of the system	
NAME	User Name list	


Action Bar Keys (Select, then press **ENTER**):

ADD	To Add new User account	1.1.3.1.1 ADD USER screen
<b>MODIFY</b>	To Modify a User settings	1.1.3.1.2 MODIFY USER screen
DELETE	To Delete a User access	1.1.3.1.3 DELETE USER screen
SAVE	To Save the new settings	1.1.3.1 USER SETUP screen will remain

**LEVEL** Indicates the System Access Level granted by the ADMIN (No User Entry)

## 1.1.3.1.1 ADD USER



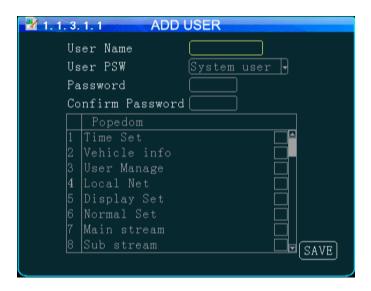

The **1.1.3.1.1 ADD USER** screen allows SYSTEM level Users to add SYSTEM (total access) or GENERAL (limited access) level Users for setup and operation of the MOBILE HD DVR User Interface. A total of eight User accounts are allowed.

After a User Account is entered and saved it will be necessary to login again using the new Password.

To add a User Account:

NAME	Enter Users Name	
LEVEL (USER PS	Select from two options:	
W)	SYSTEM Grants unlimited access and change privileges, including creating	
	User Accounts, Passwords and restricted access Rights	
	GENERAL Provides Password, limited access and change Rights	
PASSWORD	Enter Users 6 digit Password (Numbers only)	
CONFIRM	Re-enter the same User Password	
RIGHTS(POPEDOM)	A title for the list of the User screens allowing setup and change of the MOBILE HD DVR features. Select as necessary	
снесквох 🔳	Select the User Access (setup and change) Rights by moving the blue highlight to the desired Rights Check box and pressing <b>ENTER.</b> Repeat process until list is complete	


Confirm the new settings are correct and save the file.

Action Bar Keys (Select, then press **ENTER**):

SAVE To save and the 1.1.3.1 USER SETUP screen will appear

## **1.1.3.1.2 MODIFY USER**




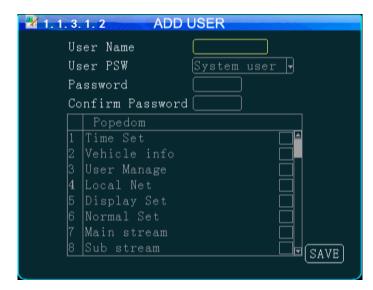

The 1.1.3.1.2 MODIFY USER screen allows SYSTEM level Users to change the parameters of an existing User account.

Once the selected User account is added the 1.1.3.1 USER SETUP screen will appear. To modify another User account repeat the Modify User account process.

To modify a User Account:

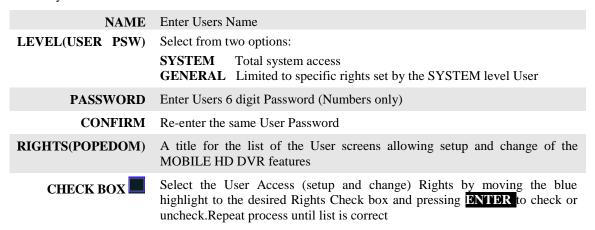

Confirm the new settings are correct and save the file.

Action Bar Keys (Select, then press **ENTER**):

SAVE To save and the 1.1.3.1 USER SETUP screen will appear

## **1.1.3.1.3 DELETE USER**






The 1.1.3.1.3DELETE USER screen allows a SYSTEM level User to delete an existing User account.

If a User account is deleted by mistake, it will have to be re-entered using the 1.1.3.1.1 ADD USER screen.


Once the selected User account is deleted the 1.1.3.1 USER SETUP screen will appear. To delete another account repeat the Delete User account process.

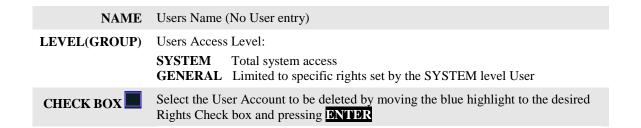


Action Bar Keys (Select, then press **ENTER**):

**DELETE** To delete User account and the 1.1.3.1 USER SETUP screen will appear

## 1.1.4.1NETWORK SETUP (3G/4G/WIFI Option Required)

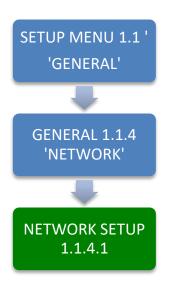

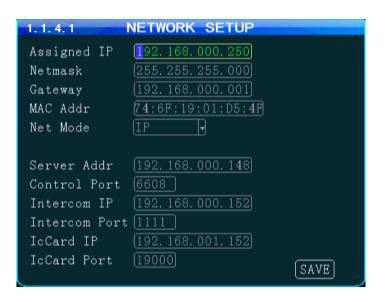

The **1.1.4.1NETWORK SETUP** function enables the User to setup a 3G/4G/WIFI based, full duplex (bidirectional), communication between the MOBILE HD DVR and the Central Monitoring Service (IVMS) (optional) for real time, remote monitoring, setup, speed, etc. To utilize these functions, a compatible Internal or External WIFI Modem or 3G/4G must be connected and enabled. The Internal Modem must be ordered and installed by the factory. The External Modem is available as an option. Contact your IVMSSysOp(IT) for the data to enter below.


IP ADDRESS	Enter in standard format (000.000.000.000)	
NETMASK	Enter in standard format (000.000.000.000)	
GATEWAY	Enter in standard format (000.000.000.000)	
MAC ADDRESS	The Modem will display the MOBILE HD DVRs MAC Address. It can be User edited	
NET MODE	Select one of two options: <b>DOMAIN</b> When selected, the <b>DOMAIN</b> and <b>DNS</b> Fields will appear <b>IP</b> When selected, the <b>SERVER IP</b> Field will appear	
DOMAIN NAME	(30 Characters)Appears only when <b>DOMAIN</b> is selected in the above field	
DNS	Appears only when <b>DOMAIN</b> is selected in the <b>NET MODE</b> field	
SERVER ADDRESS	Appears only when <b>IP</b> is selected in the <b>NET MODE</b> field	
CONTROL PORT	(6 digits) Contact IVMSSysOp for this field entry	
INTERCOM IP	Contact IVMSSysOp for this field entry. This feature requires the INTERCOM Kit (Optional)	
INTERCOM PORT	(6 digits)Contact IVMSSysOp for this field entry. This feature requires the INTERCOM Kit (Optional)	

Action Bar Keys (Select, then press **ENTER**):

**SAVE** To saveand activate the new settings

## **1.1.5.1 DISPLAY SETUP (PG 1 OF 2)**



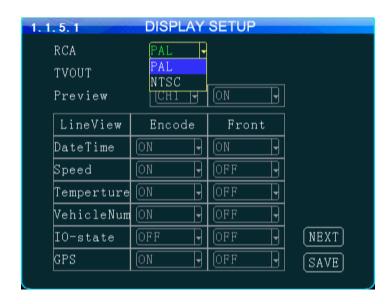

The **1.1.5.1 DISPLAY SETUP** screen allows the selection of video input (Cameras) and video output (Monitor). If the wrong type is selected for the Camera or Monitor, a horizontal 'rolling effect' may be seen.

The VIEW function allows the use of a 'hidden camera' whereby its output may be recorded on the MOBILE HD DVR and viewed remotely via the IVMS but not displayed on the local Monitor.

**VIDEO IN TYPE** Select one of two options to match the Camera Type connected to the MOBILE

HD DVR:

NTSC USA Video standard PAL Europe, China, etc.

**VIDEO OUT TYPE** Select one of two options to match the Monitor Type connected to the MOBILE

HD DVR:

NTSC USA Video standard PAL Europe, China, etc.

**VIEW** Allows use of camera without it being displayed in real time on the monitor.

Select one of two options:

**ON** The camera view will be displayed

**OFF** The camera view will NOT be displayed

VIEW CH Select the channel which will NOT be displayed on the local Monitor

Action Bar Keys (Select, then press **ENTER**):

**NEXT** To move to the 1.1.5.2 DISPLAY SETUP screen

**SAVE** To save and activate the new settings

## **1.1.5.2 DISPLAY SETUP (PG 2 OF 2)**





The 1.1.5.1 DISPLAY SETUP screen allows to the User to select Embed and/or Overlay options for the fields listed on the screen.


EMBED	Data is overlaid and becomes a permanent part of the video
OVERLAY	Data is displayed overlaid on the video but not saved as integral part of the video
DAY/TIME	Select from two options each for EMBED and OVERLAY: ON OFF
SPEED	Select from two options each for EMBED and OVERLAY: ON OFF
INT TEMP	Select from two options each for EMBED and OVERLAY: ON OFF
VEH ID	Select from two options each for EMBED and OVERLAY: ON OFF
I/O STATUS	Select from two options each for EMBED and OVERLAY: ON OFF
GPS COORD	Select from two options each for EMBED and OVERLAY: ON OFF
SD STATUS	Select from two options for OVERLAY: ON OFF
HD STATUS	Select from two options for OVERLAY: ON OFF

Action Bar Keys (Select, then press **ENTER**):

**SAVE** To save and activate the new settings

## 1.1.6.1 CODE OSD



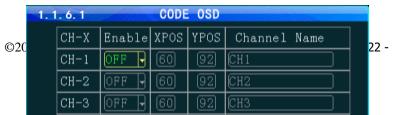


The **1.1.6.1 CODE OSD** screen provides the function of character overlay for each video channel, which determines the display position of the characters according to the abscissa and ordinate values. Note: The CH 9 is used for IP cameras connected to the RJ 45 connector, and the IP camera can also set the character overlay function individually.


ENABLE	Select from two options:  ON Enable Video channel OSD  OFF Disable video channel OSD
CH-X.	CH 1 – 9
XPOS	(0 to 99)Abscissa position parameters.
YPOS	(0 to 99)Ordinate position parameters
CHANNE L NAME	Character overlay channel name :  Can be described according to the installation location, the default CH1-CH9,

Action Bar Keys (Select, then press **ENTER**):

SAVE To save and activate the new settings

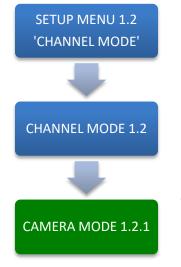

## 1.2.1 CHANNELMODE

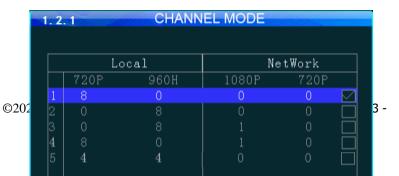

The **1.2.1 CHANNEL MODE** screen allows the selection of one of four camera groups to match the variety of AHD, Analog and IP Cameras which may be connected to the MOBILE HD DVR Camera inputs.

The MOBILE HD DVR must be restarted each time a new combination of cameras is connected using these five steps:

CAMERA MIX	Determine the types of cameras connected to the MOBILE HD DVR
SELECT	Select (Blue highlight) the group of cameras matching the cameras connected to the MOBILE HD DVR
СНЕСК ВОХ	Press <b>ENTER</b> to select the checked group
RESTART	Select SAVE, then press ENTER and THE SYSTEM WILL RESTART in order to recognize the new camera mix
GO TO	AFTER THE MOBILE HD DVR RESTARTS go to the 1.3.5.1 IP CAMERA SETUP screen

Select one of five options:

MIX OPTION 1	Only <b>AHD</b> Cameras may be connected to Camera Input Channels 1, 2, 3, 4,5,6,7,8
MIX OPTION 2	Only <b>ANALOG</b> Cameras may be connected to Camera Input Channels 1, 2, 3, 4,5,6,7,8
MIX OPTION 3	<b>ANALOG</b> Cameras may be connected to Camera Input Channels 1, 2, 3, 4,5,6,7,8
	IP Camera may be connected to the RJ45 Port
MIX OPTION 4	<b>AHD</b> Cameras may be connected to Camera Input Channels 1, 2, 3, 4,5,6,7,8
	IP Camera may be connected to the RJ45 Port
MIX OPTION 5	<b>AHD</b> Cameras are limited to connection to Camera Input Channels 1,2,3,4
	ANALOG Cameras are limited to connection to Camera Input Channels 5,6,7,8

## 1.3.1.1 RECORD SETUP





The 1.3.1.1 RECORD SETUP screen is one of the most used setup screens concerning file storage criteria.

	WINDO (VORIGINA)							
RECORD TYPE	VIDEO(NORMAL)Records video per settings in 1.3.2.1 MAIN CODE I FRAME Saves storage space but results in choppy video playback							
RECORD MODE	AUTO MOBILE HD DVR automatically starts up in Recording Mode							
RECORD MODE	TIMER Recording is controlled by settings in 1.3.4.1							
	RECORD PLAN							
	ALARMMOBILE HD DVR starts Recording Mode when triggered							
PACKET	Sets the max time a recording file can remain open.							
TIME(REC	Select from 5,15, 30, 45, 60 minutes (Shorter offers more protection)							
LENGTH)	· · · · · · · · · · · · · · · · · · ·							
<b>OVERWRITE</b>	Select whether to overwrite earlier recorded data on the storage media other than							
	the files protected by the ALM FILE LOCK setting:							
	<b>ON</b> Continuously record files as new files replace older ones							
	after the storage media is full							
	<b>OFF</b> MOBILE HD DVR will continue to write to the storage media until full							
PRERECORD	and then stop recording  Adds video from time previous to the alarmed triggered recording. Enter the							
PRERECORD	time in seconds for the length of the added files							
POST	Enter the time in Seconds to continue recording after being triggered							
RECORD(ALM	Enter the time in seconds to continue recording after being triggered							
DELAY)								
ALM OUT	Enter the time in seconds $(5 - 255)$ for the ALM indicator on the MOBILE HD							
	DVR front panel and the device connected to the SENSOR OUTPUT to be							
	activated							
ALM FILE	Enter the number of days to prevent an alarm designated file from being							
LOCK								
ENCRYPT VID	Select from two options:							
	ON Provides encryption to maintain file privacy.							
ENCRYPT KEY	OFF No protection Enter the Encryption Key to be used in the PLAYBACK program							
DISPLAY	Select the number of video channels (CH $1-9$ ) to be displayed on the Monitor							
AUD OUT VOL	Select the Audio Output volume level to the Monitor							
ACC/REC OFF	Allows selection of the camera view(s) which <b>WILL NOT</b> be recorded when							
	the vehicle is in the ACC mode:							
	NONE Every camera view will be recorded per preset parameters ALL Every cameras view will not be recorded							
	CH (Select) Choose a single specific camera view to not be recorded							
UPLOAD	UPLOAD + RECORD If Encryption set IVMS cannot open file.							
OI LOAD	The case of the control of the cannot open me.							

UPLOAD ONLY

## **1.3.2.1 MAIN CODE**





The **1.3.2.1 MAIN CODE** screen provides the ability to configure each of the MOBILE HD DVRs five video channels to provide the optimum balance of Video Type, Frames per Second (FPS), Resolution and Quality while ensuring the maximum file storage is achieved on the installed storage media. NOTE: CH 9 is for the IP Camera connected to the RJ 45 connector.

**RECORD** Select from two options:

**ON** Enable Video channel recording **OFF** Disable video channel recording

RES. CH 1 – 8 D1, HD1, CIF, 960H,720P

CH 9 720P, 1080P

The higher the chosen resolution, the more storage space will be required and the video will be more detailed.

**FPS** (1 to 30) Select the Frames Per Second to be recorded. The higher the number, the closer to real time fluidity (30 FPS for NTSC and 25 FPS for PAL settings) action will be recorded. The higher the setting the more storage space will be required for the file.

**QUALITY** (1 to 8) Enter the record resolution setting desired with 1 being the highest quality. A higher quality setting will require more file storage space, but yield a more detailed video.

**AUDIO** Select from two options:


**ON** Enable audio recording (If selected camera channel has a microphone connected)

**OFF** Disable audio recording of an audio Pickup equipped video source

**ENABLE** Select from two options:

**ON** Enable the video loss alarm

**OFF** Disable the video loss alarm

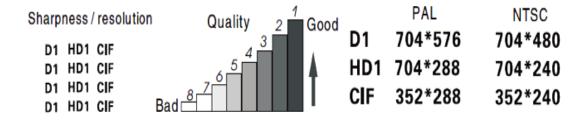

Action Bar Keys (Select, then press **ENTER**):

**SAVE** To save and the 1.1.3.1 USER SETUP screen will appear

## 1.3.3.1 SUB – STREAM SETUP





The 1.3.3.1SUB-STREAM SETUP Menu allows the User to achieve a balance between speed of data transmission and the video resolution (clarity). The uploading (transmission) of the video files from the MOBILE HD DVR to another location by WIFI or 3G cellular communication networks is limited by Bandwidth. Sub-stream settings refer to the choices being made when uploading the MOBILE HD DVR recorded files to another location such as to the IVMS Server over 3G. The User must choose a balance of speed and resolution. Higher resolution files require a longer transmission time yet yield clearer video. Whereas faster transfer rates are a result of sending lower resolution video files quickly, but yield less detailed videos for replay. In some cases the larger file size will overwhelm the systems available bandwidth and result in intermittent, slow or error laden file transfers. As shown in the chart below the sub-stream settings are related to whether the video displayed on the IVMS platform is clear and smooth. Of course, the most important factor for network transmission is the up and down rate of the local network broadband. Video resolution can be set as CIF and OCIF.

The corresponding relationship between bit rate setting and the frame rate changing is shown as below, the bit rate set here is the transmission rate of a channel.

The frame rate setting is changed according to the corresponding bit rate change; it can be set as bit rate 128, frame rate 8 in default. This setting is the current one that can guarantee fluency as well as a certain resolution when the cellular network transmits audio and video, but you can set this based on your own network situation, if under good enough network bandwidth, it can be set higher frame rate and bit rate and it can also be set automatically.

Bit rate	16	24	32	40	48	56	64	72	80	96	128	160	200	256	384	自动	 
Frame rate	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	 25

Sub-stream set is a basic set of network transmission

Action Bar Keys (Select, then press **ENTER**):

**SAVE** To save and activate the new settings

## 1.3.4.1 RECORDING SCHEDULE





The **1.3.4.1RECORDING SCHEDULE** screen allows the MOBILE HD DVR to be programmed to record for two periods per day. The default setting is to record whenever the MOBILE HD DVR is operating. It can also be set to use the same recording periods every day or each day can be set to record using a schedule specific to that day.

Select and enter the recording time setting periods per day: **PERIOD** 1 First recording time period for the day 2 Second recording period for the day **EVERY DAY** Sets the same schedule for every day of the week. Do not enter time in any other days MONDAY Set each individual days schedule independently **TUESDAY** WEDNESDAY **THURSDAY** FRIDAY **SATURDAY SUNDAY START** Enter Start recording time in 24 Hour format **END** Enter End recording time in 24 Hour format


NOTE: A recording schedule problem may occur if the schedule set above differs from the 1.1.1.1 DATE AND TIME SETUP screen when POWER MODE is set to TIMER and the POWER ON, OFF settings conflict or overlap.

Action Bar Keys (Select, then press **ENTER**):

SAVE To save and activate the new settings

## 1.3.5.1 MIRROR SETUP



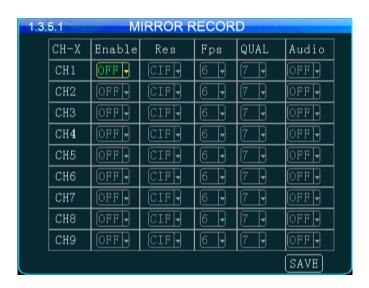

The **1.3.5.1 MIRRORSETUP** screen provides the ability to save selected video channels and any data EMBEDDED in their video frames (See 1.1.5.1 DISPLAY SETUP) using the parameters set in the configure each of the six video channels to provide the optimum balance of Video Type, Frames per Second (FPS), Resolution and Quality while ensuring the maximum file storage is achieved on the USB Drive inserted in the Rear USB 2.0 Port or SD card. NOTE: CH 9 for up to IP Cameras connected to the RJ 45 connectors.

**ENABLE** Select from two options:

**ON** Enable Video channel recording **OFF** Disable video channel recording

**RES.** CH 1 – 9 D1, HD1, CIF

The higher the chosen resolution, the more storage space will be required and the video will be more detailed.

**FPS** (1 to 30) Select the Frames Per Second to be recorded. The higher the number, the closer to real time fluidity (30 FPS for NTSC and 25 FPS for PAL settings) action will be recorded. The higher the setting the more storage space will be required for the file.

**QUALITY** (1 to 8) Enter the record resolution setting desired with 1 being the highest quality. A higher quality setting will require more file storage space, but yield a more detailed video.

**AUDIO** Select from two options:

ON Enable audio recording (If selected camera channel has a microphone connected)

**OFF** Disable audio recording of an audio Pickup equipped video source

## 1.3.6.1 SD CARD RECORDING SETUP





The **1.3.6.1 SD CARD RECORDING** screen allows the User to enable the MOBILE HD DVR to save recorded files to the SD Card. Enabling SD Card Recording does not effect the settings for the HDD.

**ENABLE(REC-** Select from two options:

BACKKUP) ON SD Card is ready to record

OFF SD Card is NOT ready to record

Action Bar Keys (Select, then press **ENTER**):

**SAVE** To save and activate the new setting

## 1.3.7.1 IP CAMERA SETUP





The **1.3.7.1 IP CAMERA SETUP** screen allows the detection and setup of an IP Camera using the MOBILE HD DVR RJ 45 Port. Once an IP Camera is connected to the RJ 45 Port it is automatically discoverable by the MOBILE HD DVR.

#### Initial IP Camera setup:

<b>GO TO</b>	1.2.1 CHANNEL MODE screen and complete the CHANNEL setup. The MOBILE HD DVR will restart in order to properly recognize the addition of the IP Camera
RETURN	To this screen and complete the addition, modification or deletion of the IP Camera as necessary
ADD	Select ADD, then press ENTER to move to the 1.3.7.1.1 ADD IP CAMERA screen


#### IP Camera Data Fields:

IPC CHANNEL	Auto fill (No User entry)
IP ADDRESS	Auto fill (No User entry)
PORT	Auto fill (No User entry)

Action Bar Keys (Select, then press **ENTER**):

<b>ADD</b>	To Add new IP Camera 1.3.7.1.1 ADD IP CAMERA screen
<b>MODIFY</b>	To Modify IP Camera 1.3.7.1.2 MODIFY IP CAMERA screen
DELETE	To Delete IP Camera 1.3.7.1.3 DELETE IP CAMERA screen

## **1.3.7.1.1 ADD IP CAMERA**

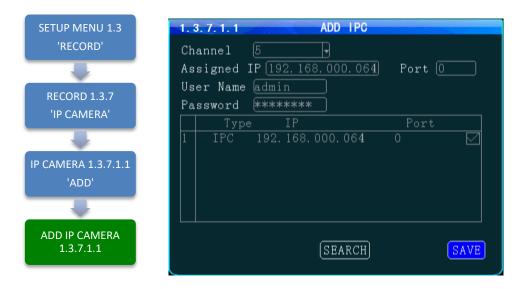

The **1.3.7.1.1 ADD IP CAMERA** screen allows authorized Users to add and search for connected IP Cameras. The IPC to be added needs to be the same as the MOBILE HD DVR's IP gateway

To add an IP Camera:

READ	Read and understand the IP Camera User Guide included with the product
CONFIGURE	Setup the camera parameters as necessary
CONNECT	Plug the IP Camera cable from the camera into the RJ45 jack on the rear of the MOBILE HD DVR
<b>SEARCH</b>	Select, then:
ENTER	Press. The MOBILE HD DVR will search for a correctly connected IP Camera and will auto fill and display the units Channel, IP Address and Port. If no IP Camera is detected a 'NO IP CAMERA FOUND' message will appear on screen
<b>USER NAME</b>	Enter User Name
PASSWORD	Enter Users 6 digit Password (Numbers only)

#### IP Camera Data Fields:

IPC CHANNEL	Auto fill (No User entry)
IP ADDRESS	Auto fill (No User entry)
PORT	Auto fill (No User entry)

Confirm the new settings are correct and save the file.

Action Bar Keys (Select, then press **ENTER**):

SEARCH To search for connected IP Camera

SAVE To save and the 1.3.7.1 IP CAMERA SETUP screen will appear

## **1.3.7.1.2 MODIFY IP CAMERA**



The **1.3.7.1.2 MODIFY IP CAMERA** screen allows authorized Users to change the parameters of an existing IP Camera. This is useful for filling in the data fields when the auto fill feature is not available.

IP Camera Data Fields:

CHANNEL	Auto fill (No User entry)
ASSIGNED IP	Auto fill (No User entry)
PORT	Change as necessary
<b>USER NAME</b>	Enter User Name
PASSWORD	Enter Users 6 digit Password (Numbers only)

Confirm the new settings are correct and save the file.

Action Bar Keys (Select, then press **ENTER**):

SAVE To save and the 1.3.7.1 IP CAMERA SETUP screen will appear

## 1.3.7.1.3 DELETE IP CAMERA



The 1.3.7.1IP CAMERASETUP screen allows an authorized User to delete an existing IP Camera.

After DELETE has been selected and entered, a System Warning Message 'DELETE THIS IP CAMERA?' will be appear onscreen.

Select from two options:

CANAEL
Cancel deletion. Select and press ENTER to cancel deletion and return to the 1.3.7.1 IP CAMERA SETUP screen

Delete IP Camera. Select and press ENTER to delete the IP Camera from the system and return to the 1.3.7.1 IP CAMERA SETUP screen

Once the selected IP Camera is deleted or the deletion cancelled the 1.3.7.1 IP CAMERA SETUP screen will appear with the System Warning.


Action Bar Keys (Select, then press **ENTER**):


SETUP screen

To Cancel deletion and return to the 1.3.7.1 IP CAMERA SETUP screen

To Delete the IP Camera from the system and return to the 1.3.7.1 IP CAMERA

## **1.4.1.1 SENSOR SETUP**

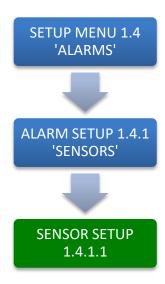

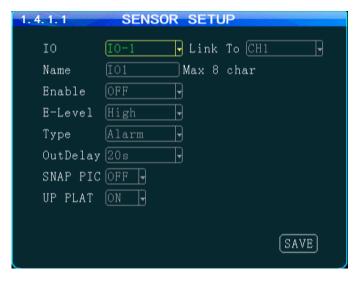


The **1.4.1.1 SENSOR SETUP** screen defines the trigger response relationship between each of the 8 Sensor In (Inputs) and actions available.

SENSOR IN (IO)	Define the trigger response relationship for each of the 8 SENSOR IN (Input)
NAME	Name of SENSOR IN device (8 Characters)
LINK TO	Enter Camera channel (CH) to switch to full screen and display video when assigned SENSOR IN is triggered
ENABLE	Select from two options:  ON The selected functions are 'On' OFF The selected functions are 'Off'
E- LEVEL	HIGH Detect when Voltage is 'On' LOW Detect when Voltage is 'Off'
ТҮРЕ	Select type of response is to be sent when the V LEVEL SETTING is matched: <b>ALARM</b> Triggers a response sent to one of the two SENSOR OUT ports <b>SYSTEM</b> Triggers an entry into the SYSTEM and/or ALARM/EVENT LOG
POST RECORD	Select the time delay in seconds for ending a triggered recording
SNAPSHOT	Takes a single picture
UP PLAT	Alarm information reported to the management center

## **1.4.2.1 SPEED SETUP**



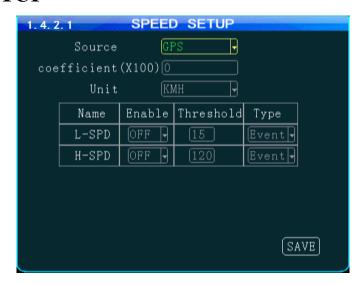

The **1.4.2.1 SPEED SETUP** screen allows the User to trigger the MOBILE HD DVRs Recording Mode based on low and high speed thresholds determined by the settings entered. Either or both High and Low settings may be entered independently.

Vehicle speed can be monitored and recorded using the speed data (KPH or MPH) from either the onboard GPS (optional) or a more accurate speedometer sensor (optional). The Speed Alert can be set to monitor Upper and Lower Speed Limits to trigger an alarm, log, and record the event.

**SOURCE** Select the source for the speed related data:

**GPS** Select to use to **GPS** data to obtain vehicle speed information.

**VEHICLE** Select to use speed related data from the optional VEHICLE SPEED

**MODULE** 

**COEFF(X100)** Only used when the VEHICLE SPEED OPTION is installed:

Set according to User Manual provided with the VEHICLE SPEED MODULE

**UNIT** Unit of speed measurement

KMH Kilometers per Hour
MPH Miles per Hour

**ENABLE** Select from two options:

ON The selected functions are 'On'
OFF The selected functions are 'Off'

**NAME** Enter the speed (up to 3 digits) at which to trigger the response required:

**LOW(L-SPD)** Sends a trigger when the vehicle speed falls below the entered speed **HIGH(H-SPD)** Sends a trigger when the vehicle speed exceeds the entered speed

**TYPE** Select the Type of Trigger response required:


**ALARM** Sends a trigger to generate an alarm (See 1.4.5.1 ALARM OUT SETUP)


**EVENT** Sends a trigger to enter a message in the ALARM/EVENT Log

Action Bar Keys (Select, then press **ENTER**):


**SAVE** To save and activate the new settings

## 1.4.3.1 G SENSOR SETUP

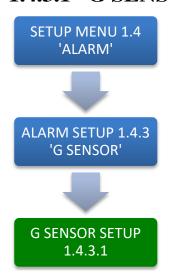

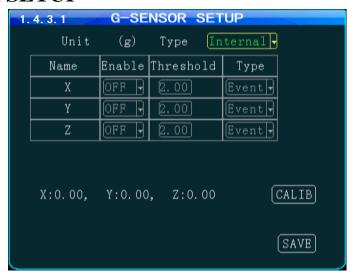

The 1.4.3.1 G SENSOR SETUP screen (accelerometer) enables the MOBILE HD DVR to monitor the movement of the vehicle in 3 Axes (X, Y, Z) and can be used to trigger a response based on the Trigger values set in the G Sensor Menu. Readings from the sensor may indicate hard braking, acceleration, impact, sharp turns, etc. This data may be used to evaluate driver and vehicle performance, maintenance cycles and load dynamics.

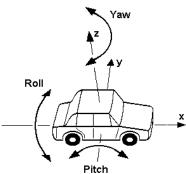

**AXIS(NAME)** (No user entry) The three AXIS of movement of the monitored vehicle are: X = ROLL Possible high speed into turns relative to load

Y = PITCH Possible Hard braking or acceleration, speed bumps, etc. Z = YAW Possible bad shocks, uneven road or unsecured load, etc.

**DATA** (No user entry) Displays the current G Force reading for each Axis

**ENABLE** Select from two options:

ON The selected functions are 'On'
OFF The selected functions are 'Off'

**TRIGGER(THRESHOLD)** Enter the G Force setting (up to 3 digits) at which to trigger the response required:

Sends a Trigger when the vehicle G Force is less than or greater than the trigger setting

**TYPE** Select the Type of Trigger response required:


**ALARM** Sends a trigger to generate an alarm (See 1.4.5.1 ALARM OUT SETUP)

**EVENT** Sends a trigger to enter a message in the ALARM/EVENT Log

Action Bar Keys (Select, then press **ENTER**):

**CALIBRATE** Select after installing the MOBILE HD DVR to reorient the G Sensor

#### 1.4.4.1 TEMPERATURE SETTINGS

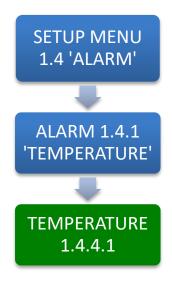




The **1.4.4.1TEMPERATURE SETUP** screen allows the User to trigger the MOBILE HD DVRs Recording Mode based on low and high temperature thresholds determined by temperature settings entered. Either or both High and Low settings may be entered independently.

DEVICE Select the Sensor used as the temperature reporting source: MOBILE HD DVR/DISKMOBILE HD DVR internal temperature (Standard) **TEMP EXT** (1-4) External temperature sensors, up to 4 (Optional) **NAME** Enter a unique name for each temperature reporting source Select the unit of temperature measurement: F Fahrenheit C Celsius There are two settings (each optional) to create the upper and lower temperature range: RANGE LOW(L-TEMP)Low temperature setting row (NAME) HIGH(H-TEMP)High temperature setting row Select the operational status of this function: **ENABLE** The selected functions are 'On' ON **OFF** The selected functions are 'Off' Enter the Temperature limits and select + or – indicators as needed: TRIGGER(T LOW HRESHOLD) The Low temperature to trigger a response **HIGH** The high temperature to trigger a response **TYPE** Select one of two options: Event will be, recorded, logged and searchable as an ALARM ALARM **EVENT** Event will be, recorded, logged and searchable as SYSTEM

Action Bar Keys (Select, then press **ENTER**):

## 1.4.5.1 ALARM OUT SETUP



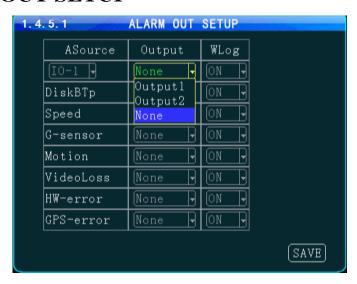


The **1.4.5.1 ALARM OUT SETUP** screen defines the Input – Trigger – Response relationships with the various sensors and reporting devices connected to the MOBILE HD DVR. The ALARM OUT SETUP screen adds the ability to add ALARM and ALARM logging responses to the other criteria set within the individual Sensor and Device screens.

ALM SOURCE (ASOURCE)	The input to trigger the ALM (Alarm) Output
ALM OUTPUT (OUTPUT)	The output path to a Sensor Output
LOG	Select whether the detected Alarm is also logged as an ALARM
SENS IN	Select one of 8 Sensor Inputs (SENS IN)
TEMP IN (DISK BTP)	Select one of 5 Temperature inputs (TEMP IN 1 is standard. All others require optional external sensor devices.
SPEED	Monitors High and Low speed settings in 1.4.2.1 SPEED SETTINGS
G SENSOR	Monitors X, Y, Z settings in 1.4.3.1 G SENSOR SETUP
VIDEO LOSS	Monitors Video Loss (Camera malfunction)
MOTION DET	Monitors movement or light changes sensed by the 1.4.6.1 MOTION DETECTION SETUP
HW ERROR	Monitors factory set criteria for the detection of hardware level errors
GPS ERROR	Monitors factory set criteria for the detection of GPS Module signal reception errors

Action Bar Keys (Select, then press **ENTER**):

## 1.4.6.1 MOTION DETECTION

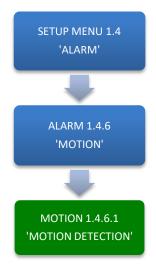



The **1.4.6.1 MOTION DETECTION** screen is the first of three screens necessary for the setup, activation and testing of the motion detection features for each camera channel. Motion Detection based triggering may only be used when the vehicle is parked or when the camera is in an enclosed area of the vehicle, as changing lighting conditions may trigger the Motion Detection Zone.

Setup must be complete for all three screens to properly enable and test the motion detection function:

1.4.6.1 MOTION DETECTIONSETUP

Setup and subsequently test each camera using the motion detection function

1.4.6.1.1 MOTION DETECTION GRID 1.4.5.1ALARM OUT SETUP Setup the motion detection activation zone

Setup the motion detection response to trigger an

ALARM OUT and/or LOG the event.

**ENABLE** Select from two options:

ON The selected functions are 'On'

**OFF** The selected functions are 'Off'

**SENSITIVITY** Select from three levels:

LOW

MED

HIGH

**AREA** Select the **SETUP** field. The 1.4.6.1.1 MOTION DETECTION screen will appear as

an overlay on the camera view. The SETUP button backgrounds are color coded to

display their status:

**BLACK** Motion Detection area has not been setup

**GREEN** Motion Detection Zone is ready to detect

YELLOW Motion Detection has been triggered

SETUP When you select the Area 'SETUP' button the 1.4.6.1.1 MOTION DETECTION

GRID screen is displayed. Instruction and setup of the motion detection zone are on


the following page

Action Bar Keys (Select, then press **ENTIER**):

SAVE To save the Motion Detection Zone settings

ALARM OUT SETUP To move to the 1.4.5.1 ALARM OUT SETUP screen and add a response

## 1.4.6.1.1 MOTION DETECTION SETUP GRID

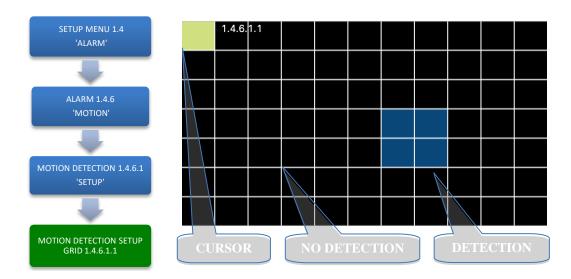

The **1.4.6.1.1 MOTION DETECTION GRID** is the second of three screens required to setup and test the Motion Detection function. It allows the user to define a detection zone to automatically trigger the functions set in the 1.4.6.1 MOTION DETECTION SETUP and the 1.4.5.1 ALARM OUT SETUP screen.

#### Motion Detection Zone (MDZ) definition:

A User defined grid of transparent squares overlaid on a Camera view creating a response to light or movement. The User can define the active motion detection zone with Blue squares.

CLEAR	No detection set	
YELLOW	Cursor position	
BLUE	Detection area set	

Once all three related screens are properly setup, a detected movement meeting the parameters set will trigger a response governed by the **1.4.5.1 ALARM OUT** screen.

Create the Active Motion Detection Zone:


SELECT	Move Yellow Cursor to the square to be enabled as part of the Detection Zone
ENTER	Press to enable (Becomes Blue) or disable the square (Becomes Clear)
REPEAT	Continue until the Detection Zone is defined
RETURN	Press to return to the 1.4.6.1 MOTION DETECTION screen.

The affected camera button will display a Green background if it is setup to be tested. For a motion detected response to trigger an ALARM and/or LOG the event it is necessary to go to the 1.4.5.1 ALARM OUT SETUP screen and complete the related setup process

To setup additional cameras repeat the above and continue setting up the parameters for each camera as necessary.

## 1.4.7.1 OTHER ALARMS



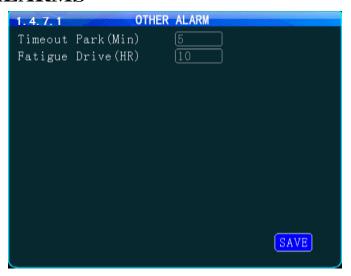

The **1.4.7.1 OTHER ALARMS** screen allows the IVMS to monitor Driver (Vehicle) activity by monitoring the time elapsed alarms for each field.


ACC TIMEOUT Select the length of time before and alarm is sent and logged. Monitors the time the Vehicle Ignition Switch is in the ACC position and reports it to the IVMS

REST REMINDER (FATIGUE DRIVE) Select the length of time before and alarm is sent and logged. Monitors the time the Vehicle Ignition Switch is in the ON position and reports it to the IVMS

Action Bar Keys (Select, then press **ENTER**):

## 1.5.1.1 CONFIGURATION



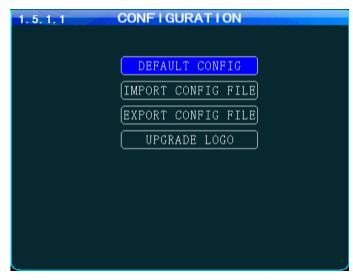

The **1.5.1.1CONFIGURATION** screen allows the user to copy the basic system settings from one MOBILE HD DVR and transfer (Export) them to another MOBILE HD DVR using an USB flash drives.

#### **EXPORT CONFIG FILE**

Select to copy this MOBILE HD DVRs system settings to an USB flash drivesfor use as backup or to easily setup another MOBILE HD DVR:

- 1. Insert the USB flash drives on the front panel
- 2. Select EXPORT CONFIG FILE button
- 3. Remove USB flash drives

#### IMPORT CONFIG FILE

Use to copy the above MOBILE HD DVRs system settings to the one to be programmed.


- 1. Ensure MOBILE HD DVR is powered Off and in UNLOCK position
- 2. Insert USB flash drives containing the EXPORT CONFIG FILE
- 3. Close the Security Door and turn Key to the 'LOCK' position
- 4. MOBILE HD DVR will start up and automatically copy the settings on the USB flash drives and complete the startup process
- 5. When the Camera Screen appears Turn Key to 'UNLOCK' position
- 6. Open Security Door; remove the USB flash drives

# RESET TO DEFAULT (DEFAULTCONFIG)

Resets MOBILE HD DVR to the original factory settings and permanently deletes any other settings. The SYSTEM will prompt you to reconfirm prior to completing the reset to original settings

CHANGE LOGO (UPGRADE LOGO) Add or upgrade a logo to be displayed on the MOBILE HD DVRs LCD Monitor during the start up process

## 1.5.2.1 FORMAT STORAGE MEDIA

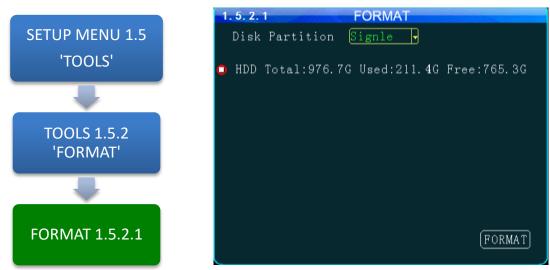

The **1.5.2.1 FORMAT** screen allows the User to format Storage Media a (HDD, SSD or SD Card) prior to its initial use or to reformat (erase) a previously used (recorded on) for reuse. Use only name brand SD Cards rated Class 10 or better. Use only an SV rated, EXT3 formatted HDD/SSD in the Drive Tray.

#### To Format:

DISK Select from two options to be formatted and press **ENTER PARTITION SIGNLE** One partition after formatting the disk **MULTIPLE** Multiple partitions after formatting the disk **SELECT** Select from two options to be formatted and press **ENTER**: **HDD** Hard Disk Drive (Regular HDD will be formatted as EXT3) SDSD Card **FORMAT** Select and press **ENTER** to begin Format process **READ** 1.5.2.1 SYSTEM WARNING screen will appear: **SYSTEM** WARNING HDD Total:976.5G Used:208.6M Free:976.2G Be sure to format? OK CANCEL FORMAT **OK** To **FORMAT:** Select and press **ENTER**. No other warnings will appear CANCEL To CANCEL: Select and press **ENTER** to return to the beginning of the Format process

Action Bar Keys (Select, then press **ENTER**):


FORMAT To begin Format process

OK To FORMAT. No other warnings will appear

CANCEL To CANCEL

# 1.5.3.1 SEARCH SYSTEM and ALARM LOGS



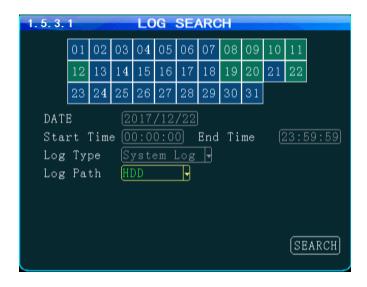

The **SEARCH SYSTEM and ALARM LOGS** Menu allows the user to search all logged events or to search for specific predetermined events the MOBILE HD DVR previously recorded on the installed HDD or SD Card.

The colored grid shown lists the days of the search month . To expedite file searches Days with recordings available have a green background.


SEARCH DATE	Enter the date to be searched in the format shown in this field
START TIME	Enter the Start Time in 24 hour format for the files to be searched
END TIME	Enter the End Time in 24 hour format for the files to be searched
ТҮРЕ	Select from three options:  SYSTEM Search recorded operating system events, i.e., On, Off, Changes, etc.  ALARM Search recorded ALARMS, i.e., Sens Out, etc.
РАТН	PATH Select the file storage source on the MOBILE HD DVR: HDD Search recorded files on the Hard Disk Drive SD Search recorded files on the SD Card

Action Bar Keys (Select, then press **ENTER**):

SEARCH To the 1.5.3.1.1 SEARCH LOG LIST

## 1.5.3.1.1 SEARCH LOG LIST



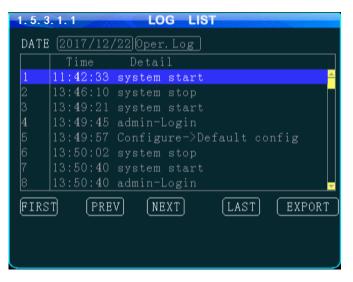

The **1.5.3.1.1 SEARCH LOG LIST** allows the user to view the results of the search criteria entered on the 1.5.3.1 SEARCH SYSTEM and ALARM LOGS screen. Use the Action Bar keys to navigate the list.

DATE (YY/MM/DD) Specific Date the listed event occurred

TIME (24 Hour Format) Specific start time of the recorded file found

TYPE Shows Type of Log file recorded to:

SYSTEM
ALARM

**DETAIL** Provides description of logged event

Action Bar Keys (Select, then press **ENTER**):

FIRST Move cursor to first page in search results

LAST Move cursor to last page in search results

NEXT Move cursor to next (lower) page in search results


PREV Move cursor to previous page in search results

EXPORT Export LOG LIST

RETURN Press to return to the 1.5.3.1 SEARCH SYSTEM and ALARM LOGS screen

## 1.6.1.1 PTZCAMERA SETUP



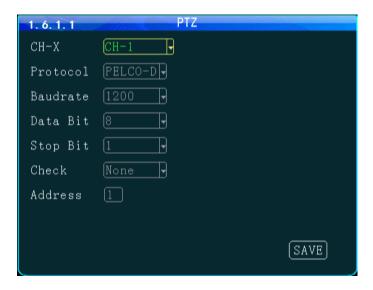

The **1.6.1.1 PTZ CAMERA SETUP** screen allows up to four PTZ (Pan, Tilt, Zoom) Cameras to be programmed, viewed and controlled by the MOBILE HD DVR using its IR Remote Control (IRC) or a compatible PTZ Joystick Control Console.

#### Read the manual supplied by the PTZ Cameras manufacturer.


Set the operational codes on the camera as required. Then enter the same codes in the MOBILE HD DVR using the PTZ Camera screen. Ex.: Pelco D (Protocol), 2400 (Baud), 1 (Data Bit), 1 (Stop Bit), NONE (Check).

The ADDR can be from 1 - 255 and must be unique for each device.

DEVICE (CH-X)	Select one of four channels for the PTZ Camera to use: PTZ 1-4
PROTOCOL	Select from two industry standard PTZ operating codes:
	PELCO D PELCO P
BAUDRATE	Select to match the settings on the PTZ Camera
DATA BIT	Select to match the settings on the PTZ Camera
STOP BIT	Select to match the settings on the PTZ Camera
CHECK	Select to match the settings on the PTZ Camera
ADDR	Enter to match the settings on the PTZ Camera. Each PTZ Camera must have a different address

Action Bar Keys (Select, then press **ENTER**):

## 1.6.2.1 WIRELESS SETUP

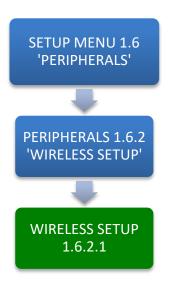



The **1.6.2.1WIRELESS SETUP** screen allows the setup of the (optional) Cellular communications capability of the MOBILE HD DVR allowing real time cellular communication between the MOBILE HD DVR and the IVMS using a carrier compatible SIM Card (Second Card option available) and the Cellular Communication Option installed.

#### **SIM Card Setup**

A SIM Card compatible with the MOBILE HD DVRs internal cellular modem (Optional) must be inserted in the SIM slot located on the front of the MOBILE HD DVR. See SIM CARD INSTALLATION in the HARDWARE SETUP SECTION OF THE user Guide for the correct procedure.

#### **Antenna**


A compatible Cellular Antenna must be connected properly to the MOBILE HD DVR and correctly installed on the vehicle. See WIRELESS ANTENNA INSTALLATION in the HARDWARE SETUP SECTION OF THE user Guide for the correct procedure.


CELLULAR(WIRELESS)	Select from two options:
	ON Cellular features and functions are On OFF Cellular features and functions are Off
APN	Enter APN Provided by Cellular Service Provider
CENTER NUM	(*99#) Default entry
USER NAME	(Up to 16 characters) Optional User entry
PASSWORD	(Up to 16 characters) Optional User entry

Confirm the new settings are correct and save the file.

Action Bar Keys (Select, then press **ENTER**):

# 1.6.3.1WIFI SETUP (Optional module required)

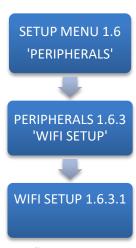


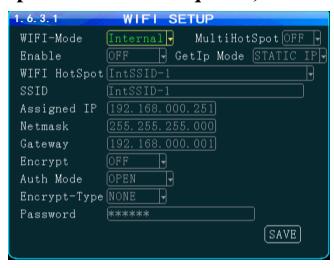

The **WIFI SETUP** Menu allows the setup of the optional WIFI communications capability of the MOBILE HD DVR allowing real time WIFI communication between the MOBILE HD DVR and the IVMS using either an (optional) internal or external WIFI (802.11n or AC) Modem. Note: Use IRC number keys to enter (Standard Format) address data used in your current wireless LAN network settings. CONTACT YOUR IT PERSON FOR SUPPORT.

WIFI MODE Select from two options: **INTERNAL** WIFIMODEM Option is installed inside the MOBILE HD DVR EXTERNAL WIFI MODEM Option is installed outside the MOBILE HD DVR To Connect multiple WIFI hotspots MULTIHOT **SPOT** ON **OFF ENABLE** Select from two choices: Activate the installed WIFI function **OFF** No WIFI option is installed or the installed option is off To establish connection between the MOBILE HD DVR and the IVMS Server, LINK TO (WIFI please input IVMS central IP and port number HOTSPOT) (Standard Format) SSID IP ADDR. (Standard Format) NETMASK (Standard Format) (Standard Format) GATEWAY **ENCRYPT** Select from two options: **ON** Encryption mode is active **OFF** Encryption function is off **GET IP MODE** Select from two options: STATIC **DYNAMIC AUTH MODE** Select from five options: 2. SHARED 4. WPA-PSK 5. WPA2-PSK 1. OPEN 3. **WPA** Select OPEN as initial setting. TYPE Select from two options: NONE **WEP** PASSWORD (Up to 16 Characters) Enter a password (optional)

## **1.6.4.1 FUEL SETUP**

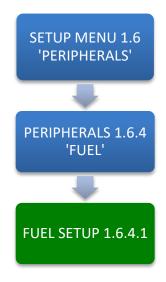




The **1.6.4.1 FUEL SETUP** Menu allows the user to track and record fuel (or other transported fluids) usage or delivery. The use of this feature requires an optional Fuel Sensor connecting via RS 232 or RS 485.

DEVICE(ID)	Select the Sensor used as the reporting source: $TANK (1-4)$
COEFF	(Optional) The Coefficient is an element of calculation adjustment varying with different brands and types of fuel or liquid storage measurement devices. Consult the Device manufacturer for details
TRIGGER	Enter the minimum amount of fuel (or other fluid) level measurement units to trigger a response
ENABLE	Select the operational status of this function:  ON The selected functions are 'On'  OFF The selected function are 'Off'
ADDR	Enter to match the settings on the FUEL SETUP.

Action Bar Keys (Select, then press **ENTER**):

## 1.6.5.1 SERIAL DEVICE SETUP



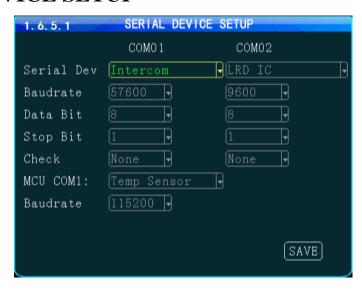

The **1.6.5.1 SERIAL DEVICE SETUP** screen allows up to two RS 232 data or control devices to be setup using industry standard RS 232 code settings.

DEVICE Select each of two control channels to setup connected devices: COM 1 COM 2 **NAME** Enter a unique name for the RS 232 device (Up to 10 characters) BAUD Select to match the settings on the RS 232 device **DATA BIT** Select to match the settings on the RS 232 device **STOP BIT** Select to match the settings on the RS 232 device CHECK Select to match the settings on the RS 232 device **ENABLE** Select from two options: ON The selected functions are 'On' **OFF** The selected functions are 'Off'

The **1.6.5.1 SERIAL DEVICE SETUP** screen allows up to eight compatible RS 485 data or control devices to be setup using industry standard RS 485 code settings.

NOTE: This does not include the PTZ Cameras setup in the 1.6.1.1 PTZ CAMERA SETUP.


MCUCOM1 Enter a unique name for the RS 485 device (Up to 10 characters)

**NAME** Select to match the settings on the RS 485 device

Action Bar Keys (Select, then press **ENTER**):

## 1.7.1 SEARCH RECORDINGS



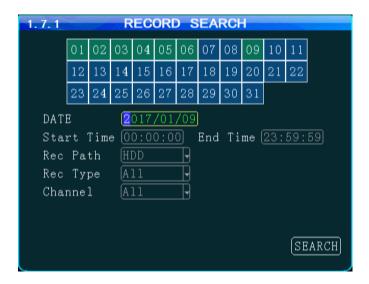

Search a specific Camera channel (CH) for recordings. Channel 5 may

The **1.7.1SEARCH RECORDINGS** screen allows the user to search by Date, Path (Storage Media) and Type (ALL, GENERAL or ALARM) list all recorded events or to search for specific predetermined events the MOBILE HD DVR previously recorded on the installed storage media Path.

The colored grid shown lists the days of the search month . To expedite file searches Days with recordings available have a green background.

SEARCH DATE	Enter the Date to be searched in the format shown in this field
START TIME	Enter the Start Time in 24 hour format for the files to be searched
END TIME	Enter the End Time in 24 hour format for the files to be searched
РАТН	Select the file storage source:  HDD Hard Disk Drive SD 2 SD Card
ТҮРЕ	Select the Type of recordings to search for the time period entered:  ALL Search ALL recordings  GENERAL Search only GENERAL labeled recordings  ALARM Search ALARM labeled recording
CHANNEL	Select the Video Channel (CH 1 – 4) to be displayed for the time period entered: <b>ALL</b> Search ALL camera channels for recordings

not be available depending on 1.2.1 CAMERA MIX screen settings


Action Bar Keys (Select, then press **ENTER**):

CH1-5

SEARCH To search and move to the 1.7.1.1 SEARCH PLAYBACK LIST

# 1.7.1.1 SEARCH PLAYBACK LIST



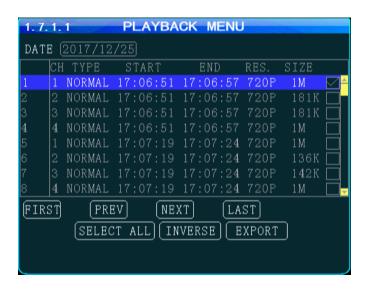

The **1.7.1.1 SEARCH PLAYBACK LIST** displays the results of the last 1.7.1 SEARCH RECORDINGS screen. Select the file or files. To Playback the recorded file(s) selected above use the instructions on the following page.

DATE	Search date for recorded files listed (No User entry)
СН	Camera channel recorded from (No User entry)
ТҮРЕ	Search Type producing listing: ALL, GENERAL or ALARM
START	Start time for the recording (No User entry)
END	End time for the recording (No User entry)
RES	Video Resolution of the recording (No User entry)
SIZE	Size of the recorded file (No User entry)
СНЕСК ВОХ	Select file and press <b>ENTER</b> to mark the file for viewing

Action Bar Keys (Select, then press **ENTIER**):

FIRST	Move cursor to first PAGE
LAST	Move cursor to last PAGE
PREV	Move cursor to previous PAGE
<b>NEXT</b>	Move cursor to next PAGE
SELECT ALL	Select all files. Fills in all check boxes
INVERSE	Reverse file listing order
EXPORT	To save the selected files to a USB Drive inserted into the front panel USB report. A 1.7.1.1.A SYSTEM MESSAGE will appear and display the File Transfer status until the download is completed

**RETURN** Pressto return to the 1.7.1.1 SEARCH PLAYBACK LIST screen

To playback the selected file(s) follow the instructions on the next page.

## 1.7.1.1 VIEWING FILES

Two options to return to the 1.7.1.1 SEARCH PLAYBACK LIST screen

#### VIEW FILE

Once the file is completely played the 1.7.1.1 SEARCH PLAYBACK LIST screen will be displayed and the last viewed selection highlighted.

RETURN

Press to end viewing and return to the 1.7.1.1 SEARCH PLAYBACK LIST screen

#### IRC Playback Related Keys:





Starts Playback of the selected recorded file. Press repeatedly to increase Playback speed by X2, X4, X8, X16

REW



REWIND Reverses the Playback of the selected recorded file. Press repeatedly to increase Reverse speed by X2, X4, X8, X16

FWD




FAST FORWARD

PAUSE/STEP




Press to pause recording. Press to advance one frame per press

# 1.8.1 SYSTEM INFO, PG 1 OF 2

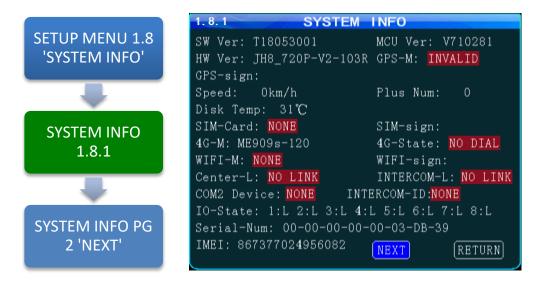

The **1.8.1 SYSTEM INFO** screen is one of two sequential screens to display the current MOBILE HD DVR system settings, real time operational status and optional business contact information. A compatible monitor must be properly connected and configured to either of the MOBILE HD DVR Rear or Front Monitor ports.

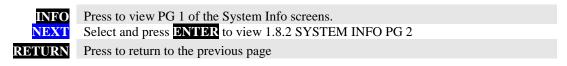

Note: For Status Report purposes only. No User entry

SW	Software Version
$\mathbf{H}\mathbf{W}$	Hardware Version
SERIAL-NUM	
MCUVER	Micro Control Unit
IMEI	The ID of the MOBILE HD DVR Cellular Modem Option when installed and enabled within the MOBILE HD DVR for communication with the IVMS Server. It is automatically displayed if an active SIM Card is installed.
DISK TEMP	Internal Temperature reading of DISK
SPEED	Vehicle Speed (should read '0' if the vehicle is properly parked)
GPS-M	Invalid/valid?
	Pulse number
3G/4G-M	Cellular Option installed?
SIM CARD	·
WIFI-M	WIFI mode (NONE/EXIST)?
CENTER-L	Central Monitoring Station Linked?
INTERCOM-L	Intercom Station Linked?
COM 1	Serial Port 1 (Device Connected)
DEVICE	
<b>GPS-SIGN</b>	Current GPS Longitude/Latitude reading
INTERCOM-ID	Intercom device ID number?
3G-STATE	
SIM-SIGN	SIM Signal reading
WIFI-SIGN	WIFI Signal reading
SENSOR IN	Status of 8 SENS IN channels. ALARM status is indicated by white letters on red
STATUS	background

# 1.8.2 SYSTEM INFO, PG 2





The **1.8.2 SYSTEM INFO** screen shown above is Page 1 of 2 sequential screens displaying the current MOBILE HD DVR system settings, operational status and business contact information.

To view the INFO screen:

**INFO** Press to view PG 1 of the System Info screens.

**RETURN** Press to return to the previous page

Note: For Status Report purposes only. No User entries.

MEDIA	Storage status for each of the installed recording media
COM 2 DEV	Serial Port 1 (Device Connected)
EXT TEMP 1	External Temperature Sensor 1 reading (requires optional sensor)
2	External Temperature Sensor 2 reading (requires optional sensor)
MILEAGE	Approximate distance Vehicle has traveled since last odometer setting
DNS	Domain IP of 3G/4G
MCU COM	Serial Port 1 (Device Connected)
<b>VOLTAGE IN</b>	Voltage supplied by vehicle to MOBILE HD DVR
AD 1	Sensor Out (SENS OUT 1) status
AD 2	Sensor Out (SENS OUT 2) status
G SENSOR X	Accelerometer X Axis reading
Y	Accelerometer Y Axis reading
Z	Accelerometer Z Axis reading

## USER NOTES AND FEEDBACK